

User Manual

Model: N607 | Portable fan

Playhot Handheld Turbo Fan


Please read this manual carefully before use. Be sure to use it in strict accordance with the requirements of the manual, and keep the manual properly for future use.

Precautions

1. Children shall not play with the appliance; be sure that infants and children will not use this appliance as a toy.
2. Children under 14 years, the elderly or disabled and inexperienced persons should use this appliance under supervision and instruction to ensure safety.
3. The appliance is not a medical product and is not intended for medical use.
4. The appliance must be placed on a firm flat surface.
5. Got a question or need help? Just send us an email at [playhotfan@email.com] — our support team is ready to help!

Structure

1. Speed Level
2. LED Indicator
3. Power Button
4. Type-C Charging Port

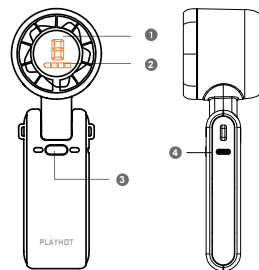

Instructions

1. Fan Speed Control:

Press the power button once to start the fan at Speed 1, the white LED will indicate the speed level. Press the button successively to switch to Speed 2/Speed 3/Speed 4/Speed 5 and to turn off the fan, the LED will turn off.

2. LED Indicator:

In operation, the constant green light shows the battery level (Four lights: 100%-75%, three lights: 74%-50%, two lights: 49%-25%, one light: 24%-5%, blinking light: 0%-4%, until turn off). After the green light turning off, the white light indicates low battery.

3. Charging Indicator:

While charging, the green light flashes (First light: 0%-24%, second light: 25%-50%, third light: 51%-74%, fourth light: 75%-99%, all four lights: 100%).

Specifications

Model:	N607
Product Name:	Playhot Handheld Turbo Fan
Brand:	Playhot
Material:	ABS+ PP
Input:	5V / 2A
Power:	5W
Charing Port:	USB-C
Operating Time:	3 -12H (depends on gear usage)
Charging Time:	3Hours
Product Size:	2.3(L)*2(W)*6.7(H) in
Product Weight:	6.7oz
Packaging List:	Handheld Turbo Fan * 1 USB-C Cable * 1 Lanyard * 1 Manual * 1 Box * 1



← Lanyard usage tutorial

Note

1. This product uses USB 5V supply , please do not use too high or too low voltage charger for charging.
2. When turning on the power switch and working on the motor, do not insert your fingers into the fan's protective net. The fan is damaged and may cause injury to your body.
3. Do not stop the fan blades with hard objects, otherwise the control circuit or fan motor will be burned out due to excessive current.
4. If you encounter any problems during receipt or use (such as non-receipt of the goods, product damage, color inconsistency or product does not work properly, etc), please don' t worry about it, we will try our best to solve it for you. You can contact us at any time through Amazon.

Warnings

1. Do not put your fingers or foreign objects into the fan to avoid injury or damage to the machine.
2. Do not use the product in wet environments or near water sources, such as sinks, bathrooms, or around swimming pools.
3. Do not drop the product or press it hard, never touch it with sharp or pointed objects when using or storing it.
4. Do not plug or unplug the power supply with wet hands or towels to avoid electric shock or short circuits.
5. Do not use water to clean the unit. The product is not waterproof so do not use it when it gets wet, and dry it in time.
6. Do not use or store the product in a high temperature (above 60°C) or in a confined space to avoid danger.
7. Do not disassemble or modify. The product cannot be wall mounted.
8. Need help with your fan?
If you have any questions, issues, or suggestions, please don't hesitate to reach out.

✉ Contact us at [playhotfan@email.com]