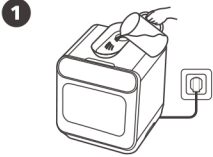
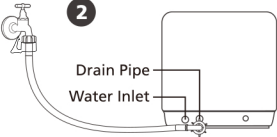
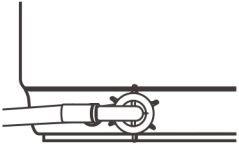
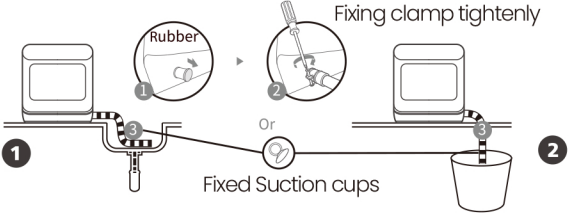
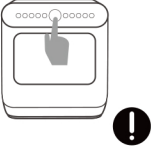
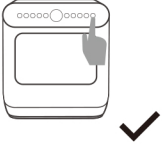
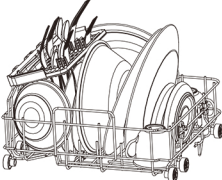





HOW TO USE AND INSTALL DISHWASHER

Failure Phenomenon	Possible Causes
Adding water	 
Installing inlet pipe	 
Installing drainage hose	

 
BASIC PERFORMANCE SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Cleaning performance	Improper program choice 	Choosing the right programs. (checking detail in user manual Page 24) 
	Improper cutlerys loading  	loading instruction 

BASIC PERFORMANCE SELF-CHECKING

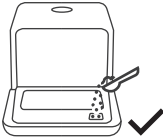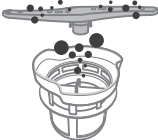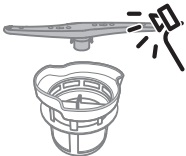Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Cleaning performance	Insufficient Detergent 	Placing right amount detergent (checking detail in user manual Page 24) 
	Filter or Spray arm Blockage 	Cleaning the Filter and Spray arm 
	Spray arm stuck 	Checking whether the spray arm is sticking and ensure normal operation 
	1 Oval Plate Dinner Plate Soup Plate Dessert DishSaucer Small Serving Bowl Medium Serving Bowl	Glass Cup Knife Serving spoon Soup spoon Fork Serving fork Gravy ladle Dessert spoon Tea spoon
	2 Soup Plate Melamine bowl Melamine dessert plate Dessert plate Dessert bowl Mug	Glass Cup Saucer Knife Soup spoon Teas poon Dessert spoon Fork Serving fork Gravy ladle

 
BASIC PERFORMANCE SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
Bad Drying performance	Improper loading 	Adjusting cutlery 
	Not activated auto open function	Better drying performance with auto-open function 
Abnormal noise	The spray arm is blocked 	Ensuring the spary arms can run normally. 

E1 OR E4 ERROR SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
E1 Error	Forgetting open Faucet 	Ensuring faucet is open before runing the dishwasher. 

E1 OR E4 ERROR SELF-CHECKING

Failure Phenomenon	Possible Causes	Self-checking Methods
E1 Error	Other problems 	Contacting after-sales service to ask professional help. 
E4 Overflow Error	Use non-dedicated dishwasher detergent 	Ordinary detergent is not allowed. please use dedicated dishwasher detergent. 
	Water overflow from tank (too much water) 	Dishwasher beep will remind you enough water 
	Other problems 	Contacting after-sales service to ask professional help. 