PORTRONICS

SoundDrum 1

10W TWS Portable Bluetooth Speaker



User Manual

1 What's Inside

Package Contents :

1. Bluetooth Speaker
2. Charging Cable
3. User Manual






Type-C Charging Cable




User Manual


2 Introduction

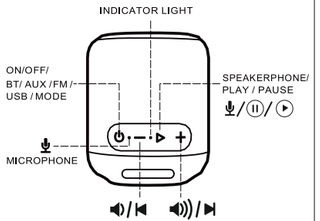

A. Long press "+" or "-" for VOL+ and VOL-
B. Short press to choose the previous or next song

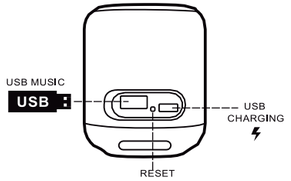

3 Bluetooth Wireless

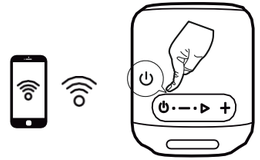


Step 1 - Hold the Button for 3 Seconds to Power On/Off

Step 2 - Choose Bluetooth Mode

Step 3 - Open ON Setting on your mobile Device, & select "SoundDrum 1"

Step 4 - While Pairing is successful, you can play music


4 Speaker Phone

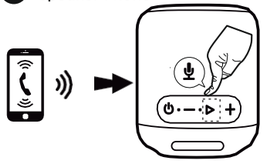

Button functions in Bluetooth mode


Status	
Incoming call	Press to answer an incoming call.
During a call	Press to end the current call.

5 USB Play Music Mode

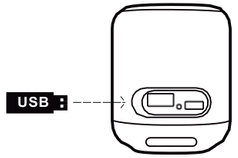


Step 1 - Short press the M button to change the mode to "USB MODE"
It will play the music on your USB flash disk
It needs to insert USB first and then only you can choose the USB mode.

6 USB Play Music Mode

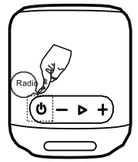

Step 1 - Short press the M button to change the mode to "FM MODE"
Step 2 - Hold press on the AUTOMATIC SEARCH.
Step 3 - Hold press "+" or "-" Previous Radio Station and Next Radio Station
Step 4 - Support semi-auto scan the FM channels (87.5MHz -108 MHz)

7 TWS (True Wireless Stereo)

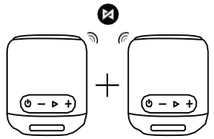

Turn on the two speakers and connect both through bluetooth. Long press on the play / pause button so that the two speakers are paired automatically. After matching, the indicator light of one of the speakers will turn on.

B . Now Please turn on the bluetooth function of your mobile device, you will find the Echo, please connect it and from thi connect yout can play music via the true wireless function.

C. Disconnect the true wireless, please press the button play/ pause for 3 seconds, and it will disconnect the true wireless.

8 LED Indications

Status	LED indiation
Fully charged	OFF
Charging	Red light up
Pairing mode	Blue Blinking
Working mode	Blue light up

DOS AND DON'TS

To ensure safe operations for your Soundbar, please follow these rules:

1. Always place the Soundbar in a safe location. When mounting to a wall, carefully screw it in to avoid damage later.
2. Avoid excessive pressure on either equipment.
3. When not in use, switch off the Soundbar & Subwoofer and unplug them from the power source
4. If the product is defective, kindly do not attempt to fix it yourself. We recommended professional help.
5. Keep the product away from water, to not cause internal damage.

Technical Specifications

Output Power	: 10W (RMS)
BT version	: 5.0
Supports	: A2DP and AVRCP
Frequency Response	: 70 - 15k Hz
Power Input	: DC 5V, 1A
S/N Ratio	: 90dB
Battery Capacity	: 2000mAh
Playback Time	: 8-10 Hours (with 60-70% Volume)
Product Dimension	: L79 * W79 * H95 mm

NOTE: Any damage caused by physical impact, water/liquid, fire, etc, caused by the customer or nature shall not be covered under warranty. Only product design, feature and functionality related faults will be considered. Never dismantle the product without due permission, otherwise it may nullify the warranty clause.

PORTRONICS

www.portronics.com
For Support
Visit : www.portronics.com
Email : help@portronics.com
Contact No. : +91 9555245245 , 011-42413131
(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)

E-waste Management
Email - info@3recycler.com

For E-waste & ROHS compliance refer to http://www.portronics.com/ewaste.html