


XAOHOME



instruction

SMALL HOLE PEDBROAD

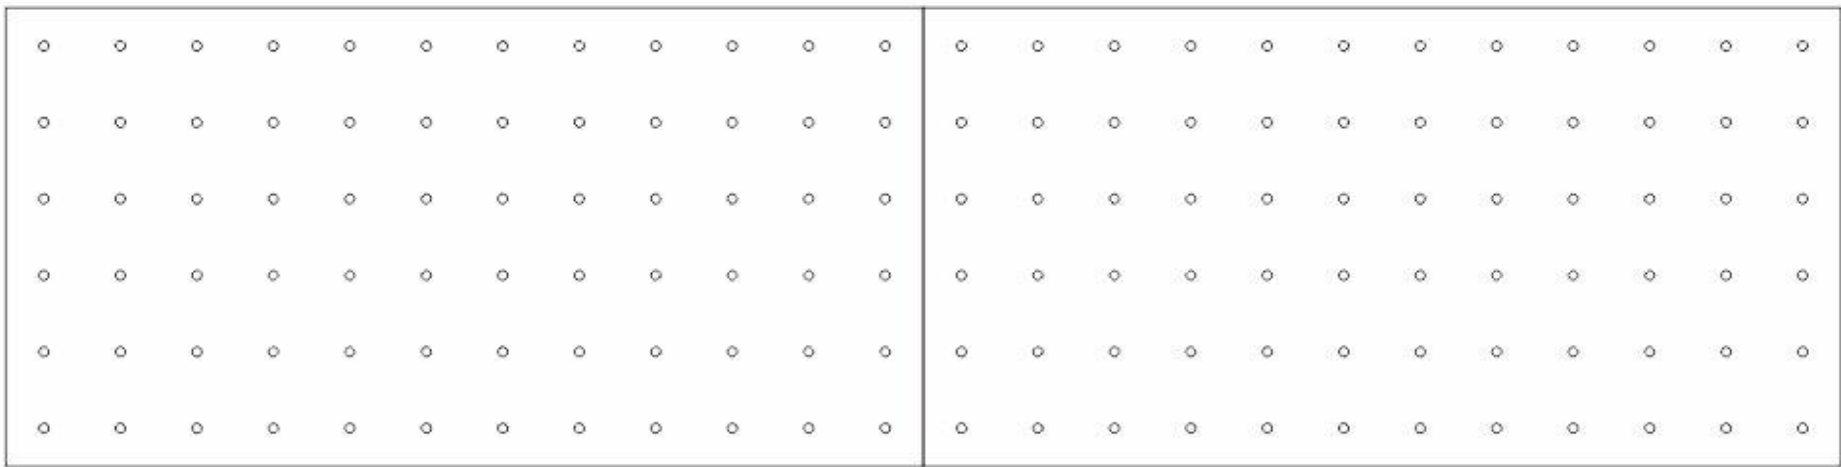


Self provided we provided	A	Electric drill	B	Hammer	C	Screwdriver
	D	SCREW	E	Drywall anchors	F	Anchors


THE SAME STEP

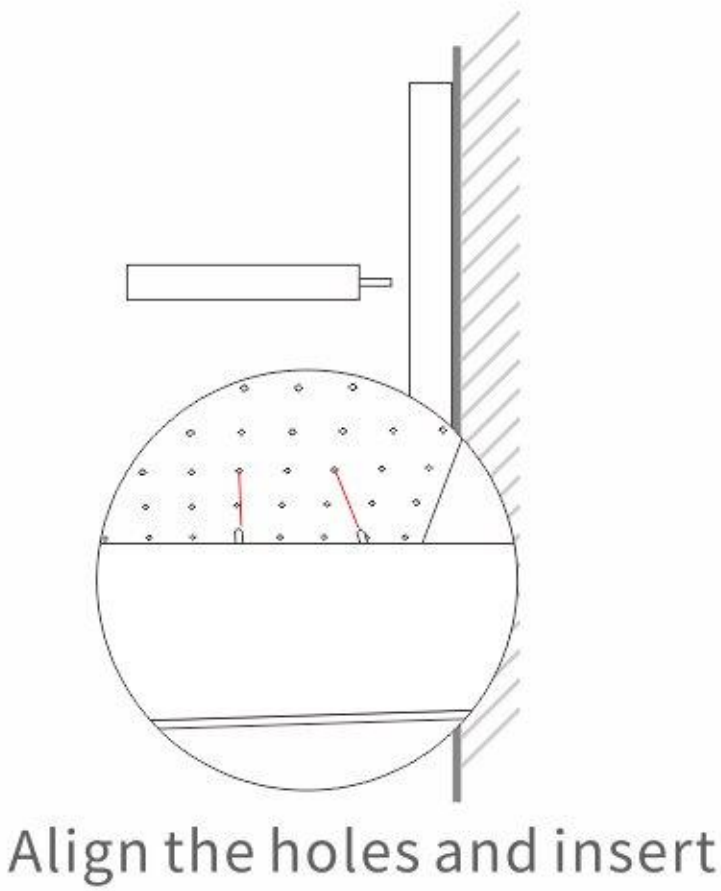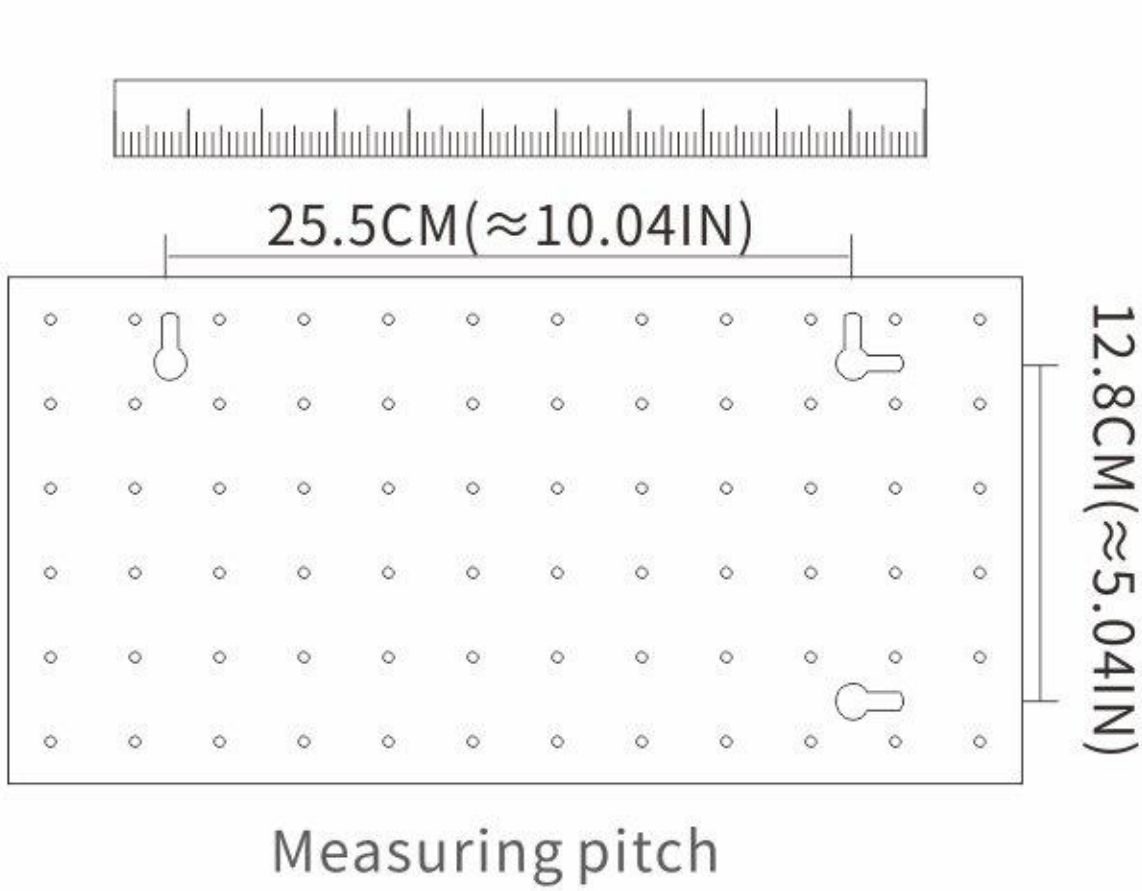


FOR GYPSUMWALLBOARD

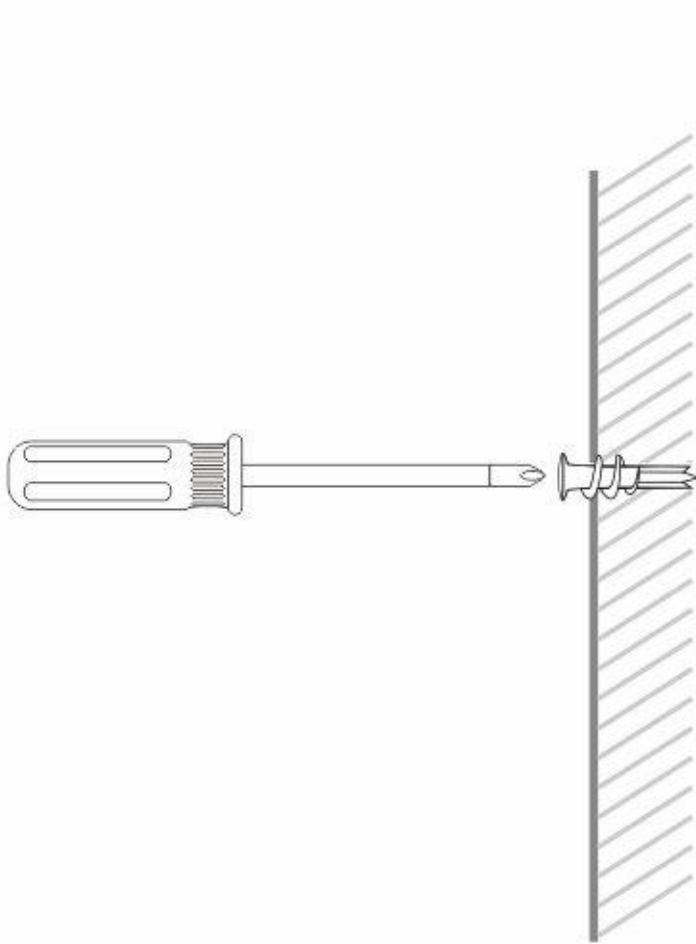

1.Tighten Drywal lAnchor

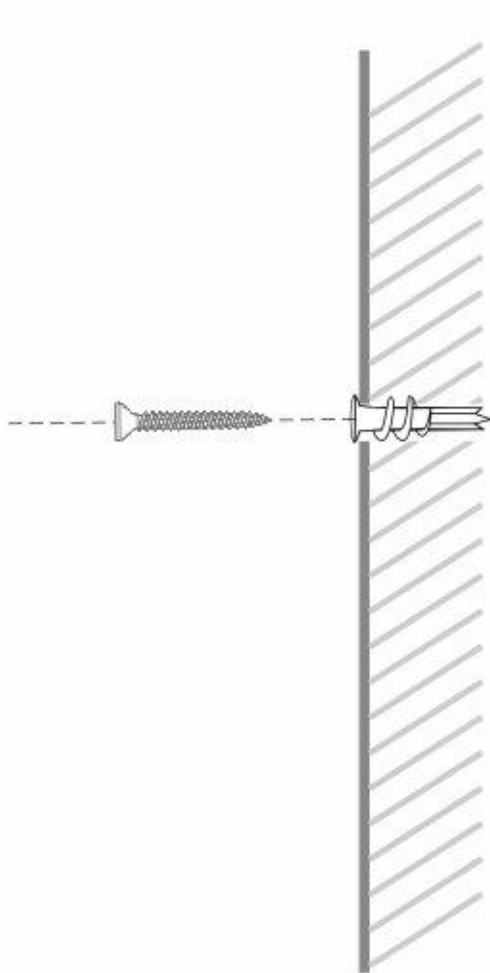


2. Tighten the screw

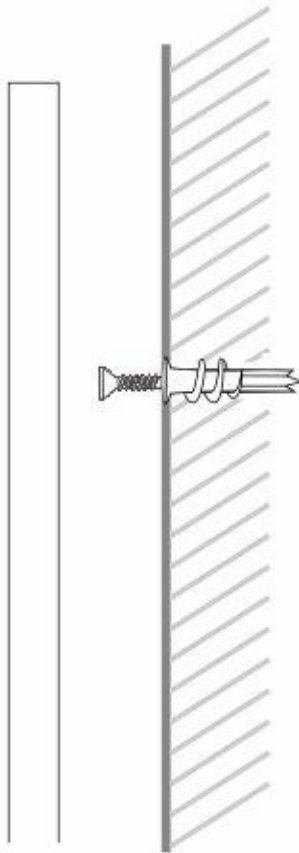


3.Align the screws and hang


FOR WOOD

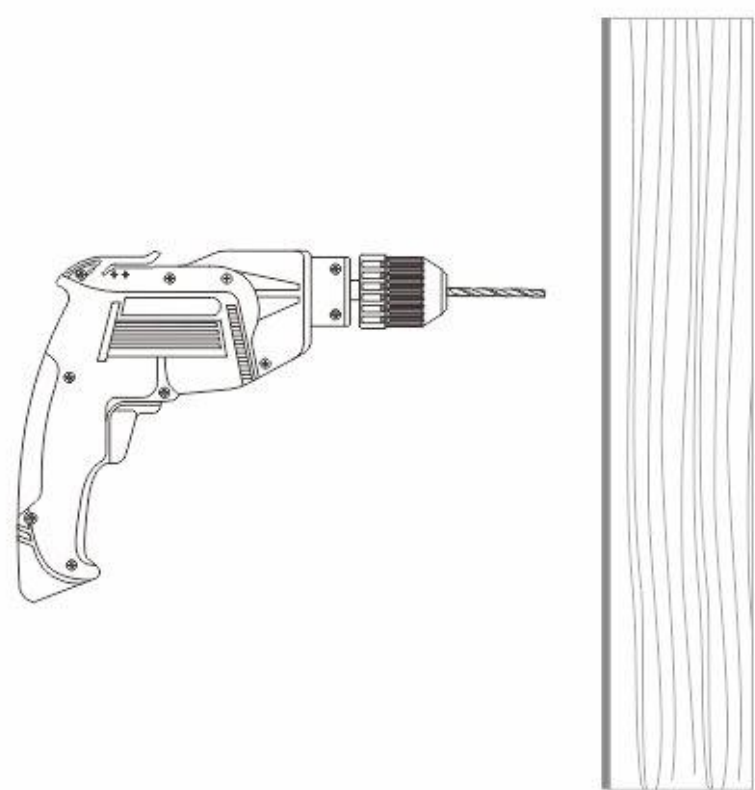

1. Drill a hole with **2MM** drill

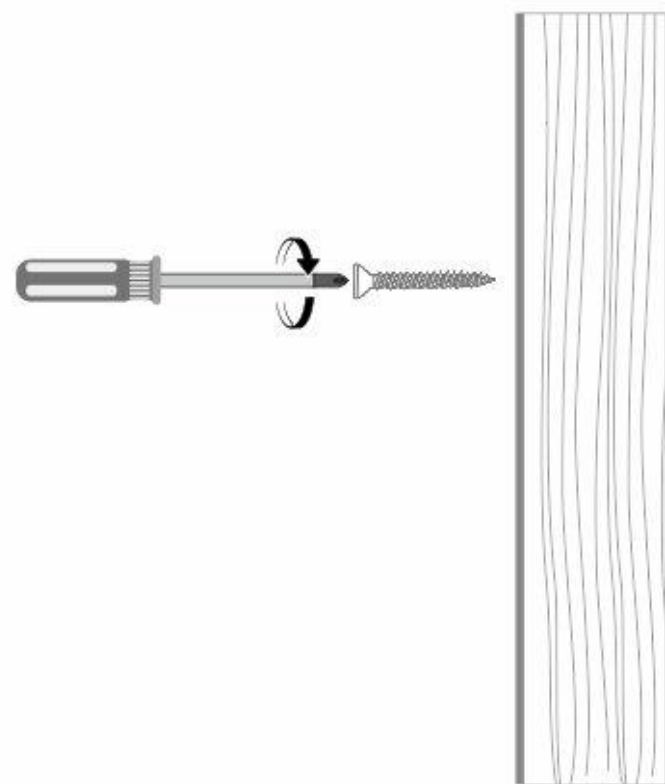


2. Tighten the screw

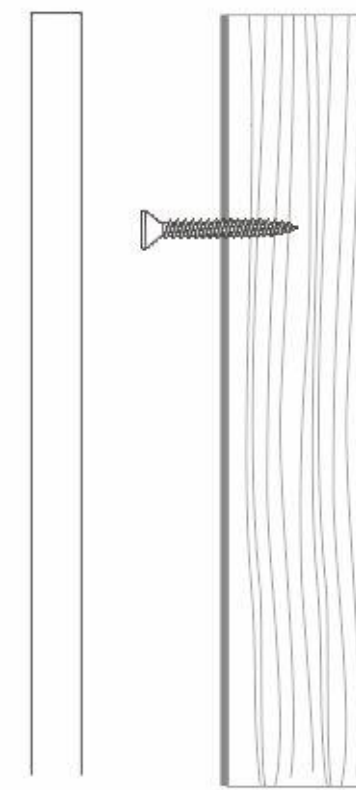


3. Align the screws and hang

FOR CONCRETE

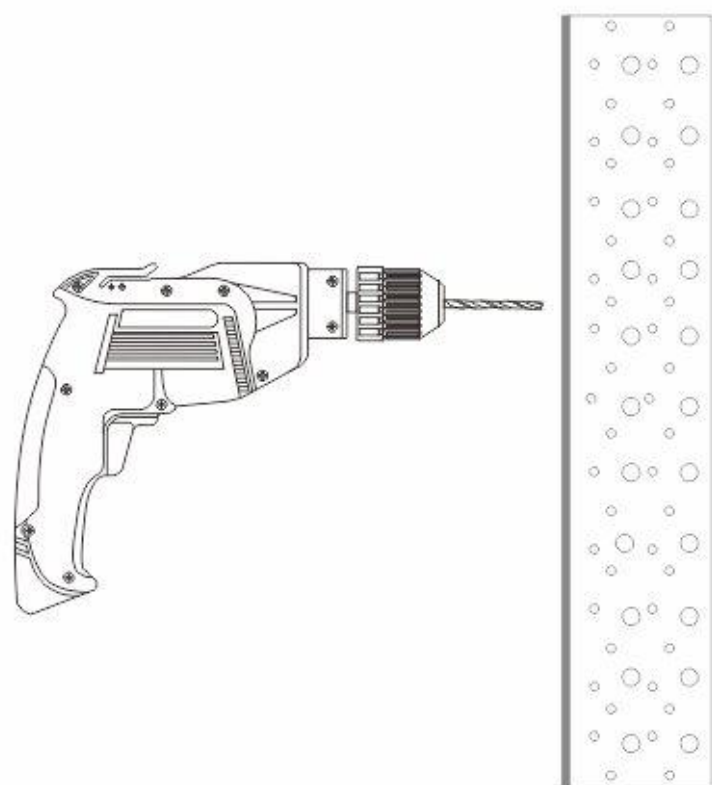


1. Drill a hole with 6MM drill,
at least 4CM deep

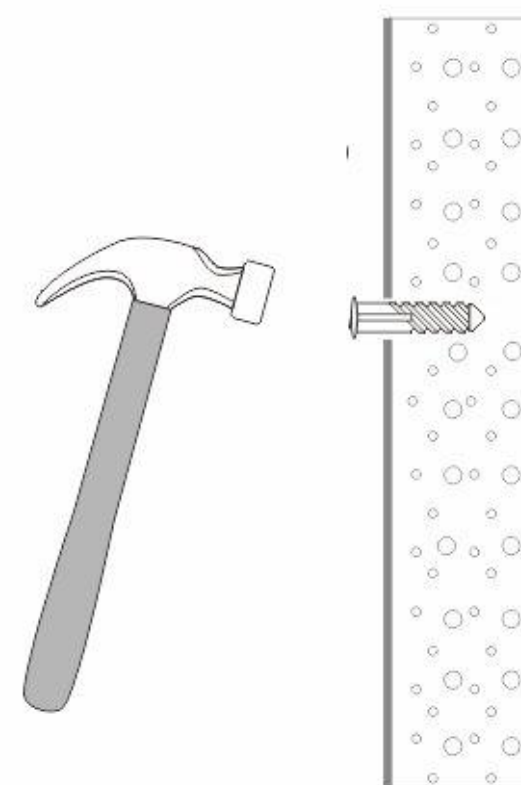

2. Knock anchor



3. Tighten the screw

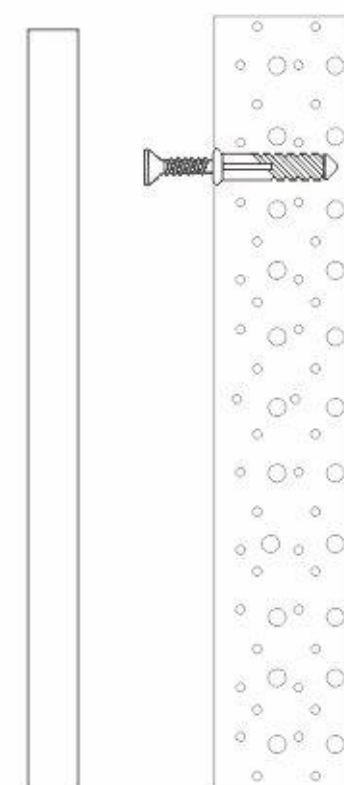

4. Align the screws and hang